

FOTOMATE

Digital Photo Frame

User Manual

FM 200 8inch - Black



Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



**CONGRATULATIONS ON YOUR PURCHASE OF THE
FOTOMATE DIGITAL PHOTO FRAME
GAURANTEE / WARRANTY CARD**

PRODUCT SERIAL NUMBER: _____

This product carries a manufacture' s guarantee of 6 months.
See enclosed booklet.

Please comlete your details on this form and send to:

Via Email: admin@cnsmarketing.co.za

Fax: (011) 781 6000

Post: Po Box 2425 Randburg 2125

Correspondence will be sent to you on new developments and
promotions

NAME: _____

POSTAL ADDRESS: _____

CODE: _____

EMAIL: _____

STORE WHERE PRODUCT WAS PURCHASED

DATE OF PURCHASE: _____

SALES PERSON: _____

**FOR FURTHER INFORMATION PLEASE CONTACT OUR HELPDESK ON
011-781 6001**



Introduction:

Thank you for your purchase of Fotomate Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Features:

1. Support Photo format: JPEG,BMP
2. Support Audio formats: Mp3&WMA
3. Support Video File Formats: MPEG1 , MPEG2, MPEG4, M-JPEG
4. Support Memory card: SD/SDHC /MS/ MMC
5. USB Connection: USB 2.0 Host & Mini USB
6. Built-in Calendar, Alarm Clock, schedule Auto On/Off
7. Adjustable brightness, contrast, saturation
8. Support slideshow with background music
9. Built-in stereo speaker (2x1W) and earphone jack
10. Adjustable slideshow speed and above 10 kinds of transition slideshow
11. OSD Language: German, English, French, Spanish, Portuguese, Italian, Greek,Turkish, Hungarian, Polish, Russian, Danish, Swedish,Norwegian, Finnish,Dutch

Packaging Check List:

- | | |
|--------------------------------|---------|
| 1. 8 inch digital photo frame | 1 piece |
| 2. User manual | 1 piece |
| 3. Remote Control | 1 piece |
| 4. AC/DC adapter(Wall Charger) | 1 piece |
| 5. Warranty Card | 1 piece |
| 6. Bracket | 1 piece |

 


CONTENTS

1 Product Diagram	6
1.1 Remote Control	6
1.2 Rear of Frame	7
1.3 Left Side of Frame	7
2. Installing & Replacing the Battery	7
3. Getting Started	8
4. Built-in Battery	8
5. Operating Instruction	8
5.1 Picture Mode	9
5.2 Music Mode	10
5.3 Photo+Music Mode	10
5.4 Movie Mode	11
5.5 Setup	11
5.6 Calendar Mode	12
5.7 Edit Mode	13
5.8 Favorite	14
6. Stand Instruction	14
7. Technical Specifications	14
8 . Troubleshooting Guide	15


1 Product Diagram

1.1 Remote Control

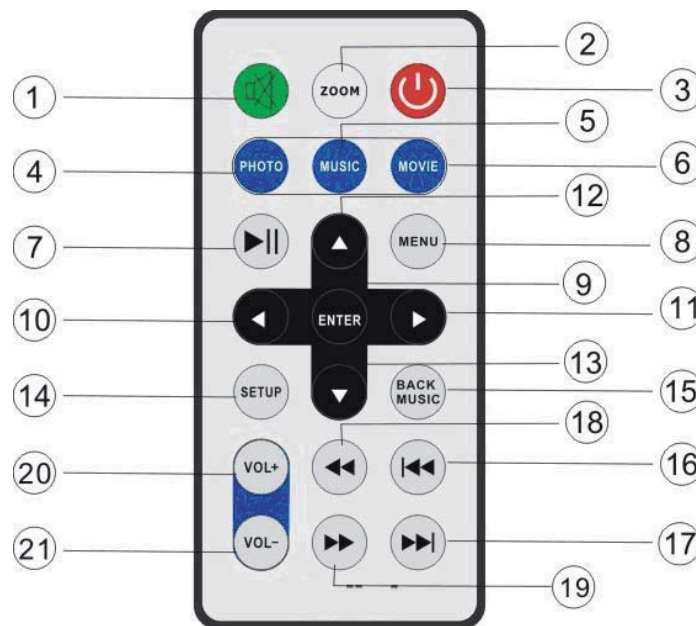


- 1) **MUTE** • Press Mute button to silence the voice temporarily
- 2) **ZOOM** • In the pause status of single picture, magnify picture display size.
- 3) **⏻** • Switch On/Off
- 4) **PHOTO** • Go directly to slideshow mode
- 5) **MUSIC** • Go directly to music mode
- 6) **MOVIE** • Go directly to movie mode
- 7) **▶||** • play/pause
- 8) **MENU** • Press to return to the main menu
- 9) **ENTER** • Press to confirm selection.
- 10) **◀** • rotate left 90°/to the left
- 11) **▶** • rotate right 90°/to the right
- 12) **▲** • Functional selection button from the bottom to the top cursor
- 13) **▼** • Functional selection button from the top to the bottom cursor
- 14) **SETUP** • Go directly to Setup mode.
- 15) **BACKMUSIC** • Go directly to show the Photo+Music
- 16) **⏮** • Move back to previous, music or video file.
- 17) **⏭** • Move forward to next picture, music or video file.
- 18) **◀◀** • When playing music or video files, press this button to backward
- 19) **▶▶** • When playing music or video files, press this button to move forward
- 20) **Volume +** • Turn up the volume
- 21) **Volume -** • Turn down the volume

 1.2 Rear of Frame

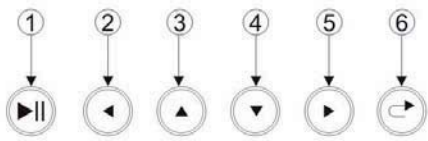


 - 1.PLAY/PAUSE
- 2.LEFT
- 3.UP
- 4.DOWN
- 5.RIGHT
- 6.RETURN

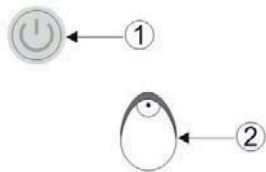

- 1.POWER ON/OFF
- 2. DC IN

 1.3 Left Side of Frame

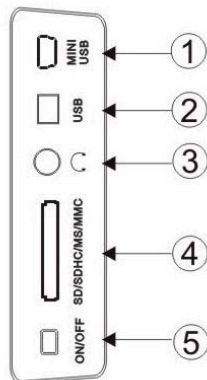

- 1. MINI USB
- 2. USB PORT
- 3. EARPHONE JACK
- 4. SD/SDHC /MS/ MMC
- 5.POWER ON/OFF

2. Installing & Replacing the Battery

Place the upside of the remote control down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive “+” side facing you. Reinsert the tray.



3. Getting Started

- 3.1 Extend the digital photo frame bracket on the back of the frame to the widest position for greatest stability, and then plug one end of the included AC adapter into a standard 110-240V AC electrical outlet and the other end into the right side the frame.
- 3.2. Remove the protective film covering the LCD.
- 3.3. Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inside. Please refer to "Installing & Replacing Battery" if you need a new battery.
- 3.4. Power on the unit by pressing the Power button on the remote control or on the top of the unit.

4. Built-in Battery

When you plug on the adapter, the battery will be recharging. It will show the recharging battery icon in the right corner. It will take 3hours for full battery charging. The working time of the built-in battery is about 3-5hours.

5. Operating Instruction



After turning on the unit, it will show the startup picture



After turning on the unit, you will see **PHOTO, MUSIC, PHOTO+MUSIC, MOVIE, SETUP, CALENDAR, EDIT, FAVORITE** . After 10 seconds, it will automatically slideshow pictures from the **FAVORITE**.



5.1 Picture Mode

1) When the automatic playing function of photo is on in the **SETUP**.



Select PHOTO from the main menu, press ENTER and select the card/USB; or you can just press PHOTO on the remote control, pictures will play automatically. Then press MENU to enter the selected mode. (18-picture mode or File Manager mode.)

2) When the automatic playing function of photo is off in the **SETUP**



Select PHOTO from the main menu, press ENTER and select the card/USB to access to the selected mode. (18-picture mode or File Manager mode.), or you can just press PHOTO on the remote control, then Use ▲▼◀▶ to highlight the picture you want to display, you can preview the picture with picture information (date, size), then press ENTER to play the picture.

 


When you enter the thumbnail mode, you can preview the 18-pictures in thumbnail state, use ▲▼/◀▶ to choose the picture, then press **ENTER** to slideshow automatically.

When the picture is playing, you can use ▲ / ▼ to flip the picture vertically/horizontally, press ◀ / ▶ to revolve the picture 90° in counterclockwise/clockwise. Additionally you can also move to previous or next picture files with ◀◀ / ▶▶ .


5.2 Music Mode

1) When the automatic playing function of music is on in the **SETUP**,

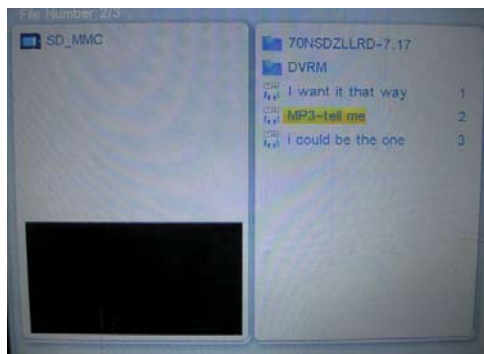

Choose **MUSIC** from the main menu, press **ENTER** and select the card/USB to access to the **File Manager** mode; or you can just press **MUSIC** on the remote control, the music will play automatically.

 2) When the automatic playing function of music is off in the **SETUP**,

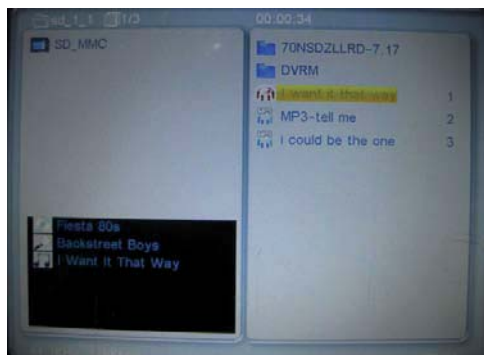

Select **MUSIC** from the main menu, press **ENTER** and select the card/USB to access to the **File Manager** mode, or you can just press **MUSIC** on the remote control. Use **▲▼◀▶** to choose the music you want to play, then press **ENTER** to play the music.

NOTE : When the music is playing, you can get the detailed music information, use **◀▶** / **▶▶** to move to previous or next music file, press **◀◀** / **▶▶** to slow down / increase the playing speed.

5.3 Photo+Music Mode



Choose **Photo+Music** from the main menu, press **ENTER** and select the card/USB to access to playing picture and music automatically. In this mode, you can use **▲** / **▼** to flip the picture vertically/horizontally, press **◀** / **▶** to revolve the picture 90° in counter-clockwise/clockwise. Additionally you can also move to previous or next picture files with **◀◀** / **▶▶** .

Note: In the **Photo+Music Mode**, picture and music files can play simultaneously .

 
5.4 Movie Mode

1) When the automatic playing function of movie is on in the **SETUP**



Choose **MOVIE** from the main menu, press **ENTER** and select the card/USB; or you can just press **MOVIE** on the remote control, the movie will play automatically. Press **MENU** to the File Manager interface.


2) When the automatic playing function of movie is off in the **SETUP**

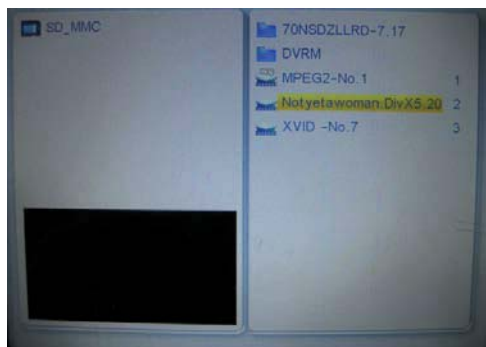

Select **MOVIE** from the main menu, press **ENTER** and select the card/USB to access to the **File Manager** mode, or you can just press **MOVIE** on the remote control, Use **▲▼◀▶** to choose the movie you want to play, then press **ENTER** to play the movie.

NOTE: When the movie is playing, you can use **◀◀ / ▶▶** to move to previous or next movie files, press **◀◀ / ▶▶** to slow down / increase the playing speed.

 5.5 Setup

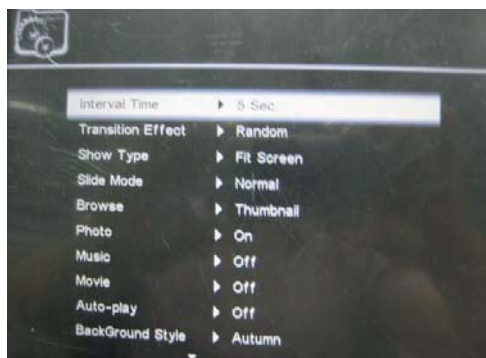

Choose **SETUP** in the main menu; press **ENTER** to access the setup interface, or you can just press **SETUP** on the remote control. Press **\$\$\$** to choose the item you want to set up, press **ENTER** to confirm use **□□** to adjust, and then press **ENTER** to confirm

Interval time (5/10/15/30seconds/1min./3min./off)

Transition effect (no effect/ blind horizontal/color ration ver/color ration hor/expansion hor/expansion ver/block1/ block 2/ block 3/ block 4/ block 5/ block 6/ block 7/ block 8 /block 9/bar LR CVG/var updown CVG/bar LR SPD/bar updown SPD/bar top down/bar button up/Rect converge/rect

spread/rombus/compression/cross comb/silk/mask/dissolve/Fade in fade out/flip/reel/move zoom/random)

Show Type: fit screen,/full screen

Slide Mode: normal/motion

Browse(thumbnail/ file manager)

Photo(on/off)

Music(on/off)

Movie(on/off)

Auto-play(photo/music/photo+music/movie/calendaroff)

Background style: summer,autumn,winter

TFT Brightness (-4/-3/-2/-1/0/+1/+2/+3/+4)

TFT Contrast (-4/-3/-2/-1/0/+1/+2/+3/+4)

TFT Saturation (-4/-3/-2/-1/0/+1/+2/+3/+4)

OSD Language:

(German, English, French, Spanish, Portuguese, Italian, Greek,Turkish, Hungarian, Polish, Russian, Danish, Swedish,Norwegian, Finnish,Dutch)

Encoding:western european /central european

Repeat mode(off/one/folder/all)

USB Source:SD/MMC/MS

Music Preference tag&cover spectrum

Default (read)

Set time: press enter to confirm, use ◀▶ to select hour, minute, second use □□□ to adjust.

Set date: press enter to confirm, use ◀▶ to select year, month, date, use □□□ to adjust.

Alarm setting: press enter to confirm, use ◀▶ to select hour, minute, status(on/off) ,use □□□ to adjust.

Exit

5.6 Calendar Mode



Choose **Calendar** in the main menu; press **ENTER** to enter the calendar interface. Use ▲▼ to show the next/previous month of the calendar, press ◀▶ to show of the last / next year of the calendar.

5.7 Edit Mode

 


Choose **EDIT** in the main menu; press **ENTER** to access the edit interface,. In this mode, you can copy picture files to Favorite or delete picture files in the Favorite.

Copy Function




After selecting **Copy**, a list of picture files will be shown if there is a storage device (U disk or Memory card). It will quit to the main menu if there is no

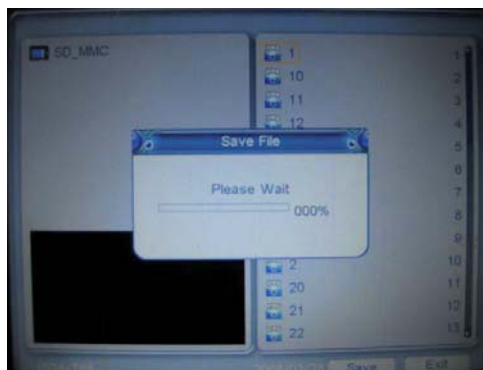

Use ◀ to select the card/USB, ▶ to the file list, Use ▲▼ to choose the file you want to save, then press **ENTER**, you can see a red frame around the selected file, you can select 15 files at most. Move to “save “with ◀▶, then press **ENTER** to save these files to Favorite.

 Delete Function

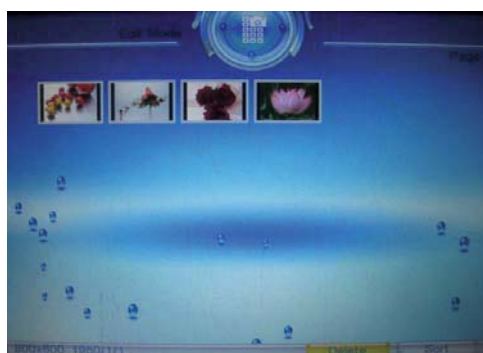

After selecting **Delete**, it will go to the Favorite mode, select the picture you want to delete, use ▼ Move to “delete “with ◀▶, then press **ENTER** to delete.

NOTE: The copy and delete functions only apply to picture files.

5.8 Favorite



Choose **Favorite** in the main menu, and then press **ENTER**, pictures will play in the Favorite automatically.

Note: When the DPF enters in the screensaver mode, it will automatically play photos in the Favorite. If there are no files in Favorite, the screen will present "no playable file".

6. Stand Instruction

Put the digital photo frame on the disk base, so that it can stand.



7. Technical Specifications

Adapter

Input: AC 100-240V 50/60HZ Output: DC 5V /2.5A

Picture Format:

JPEG

Audio Format:

MP3 & WMA

Video Format:

MPEG1 , MPEG2, MPEG4 (Divx4.0, Divx5.0, Xvid) AVI and M-JPEG

Memory Cards:

SD/SDHC /MS/ MMC

USB:

USB Host and Mini USB



Screen Parameter:

Screen Size: 8 inch TFT

Aspect Ratio: 4:3

Resolution : 800*600

Contrast: 300:1

Brightness: 250cd/m2

Response Time: 20ms

Viewing Angle: 60°(left/right/vertical), 40°(horizontal)

Working Temperature: -5°C~ 40°C Humidity: 10-85%

8 . Troubleshooting Guide

If you are having problems with your player, please consult both this guide and manual. If you need further assistance, please contact Technical Support.

- No power:
Please check whether the plug is inserted correctly.
- Remote control no function:
Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.
- Can not read the CARD or USB:
Please confirm whether there is storage in the card or USB device.
Empty devices cannot be read.
- Can not play the file:
Please confirm if the file format is compatible with the player.
- Display too bright or too dark:
Please adjust the brightness or contrast in the setup menu.
- The color is light or no color:
Please adjust the color and contrast setup.
- No sound:
Please check whether the volume is correct and the player is not in Mute mode.

Manufactured and Distributed by



No 2 Noble Road

Bordeaux. Randburg

Tel (011 781 6001)

www.cnsmarketing.co.za

